

Includes unassembled BEYBLADE top, launcher, and ripcord.
Assembly required. No tools needed.


⚠ WARNING: Do not use BEYBLADE tops or BEYSTADIUM™ on tables or other elevated surfaces.

BEYBLADE tops/BEYSTADIUM are intended to be used on the floor. Do not lean over the stadium when BEYBLADE tops are in play. BEYBLADE tops may bounce up and hit eye or face.

- Before assembly and playing, please read instructions. Please keep these instructions for future reference.
- When removing parts from runner frame, ask an adult to help you trim off any excess plastic using scissors or other suitable tool.
- The frame is numbered. Please follow the numbers carefully and make sure you are assembling the right parts.
- Discard plastic bags immediately.

PARTS:


Custom case, Bit Protector, Attack Ring A/B, Weight Disk, Spinning Core, 2-way launcher, ripcord, Decals.

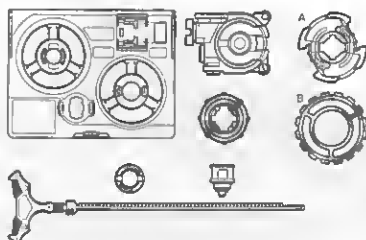


BEYSTADIUM sold separately.

BUILD:


- 1** Apply decals as shown in the diagrams.

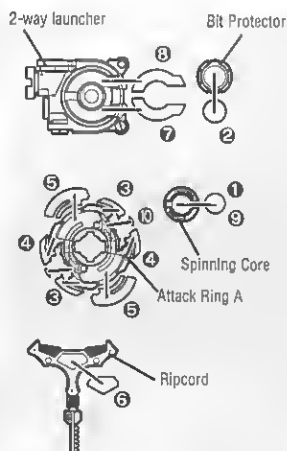


- 2** Assemble the Weight Disk as shown in the diagram. If you assemble the Weight Disk upside-down, you will not be able to assemble the Attack Ring.

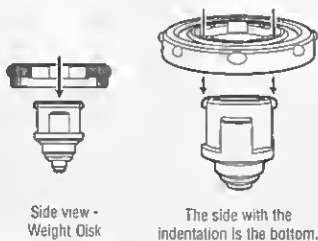


- 3** Assemble the Attack Ring A/B as shown in the diagram. If you assemble the Attack Ring upside-down, you will not be able to assemble the Attack Ring.

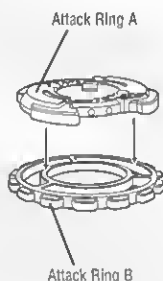


- 4** Be sure to attach Attack Ring in the right direction (See diagram).

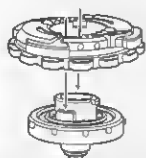

- 5** Holding Spinning Core in place, align grooves on Bit Protector with tabs on Core. Lock Bit Protector with Bit Key by turning left. Turn Bit Protector right with Bit Key to disassemble top.

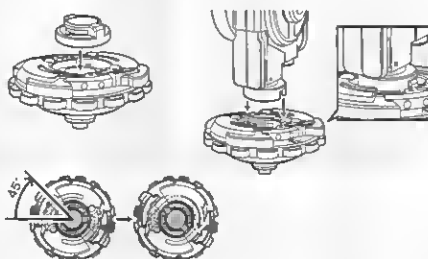


 
- 6** Your BEYBLADE top is now ready for battle!



LAUNCH:


A

Choose which direction to launch your top (left or right spin) with the 2-Way Launcher. Insert ripcord as shown.

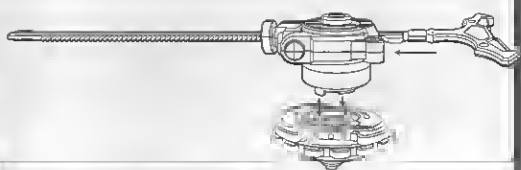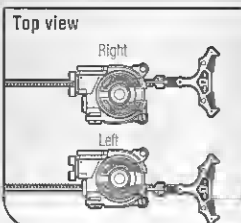


B

Insert Holder Lock tabs on launcher into grooves on Bit Protector. Launcher should stay attached to BEYBLADE®* top when inserted correctly.

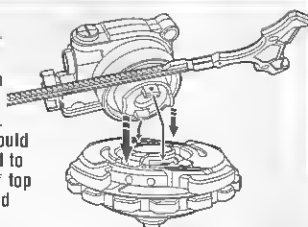

C

Holding the launcher securely, pull the ripcord over the BEYSTADIUM (not included) – the BEYBLADE top will spin... launch... and battle!

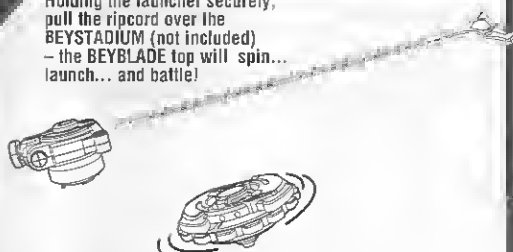

FEATURES:



Use the top slot for right spin.
Use the bottom slot for left spin.



HARD METAL SYSTEM™*

tops' steel components and low profile give it great attack strength, and make it a smaller target!

Most HARD METAL SYSTEM top parts are interchangeable with other HARD METAL SYSTEM tops!

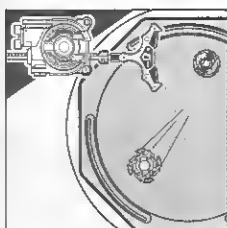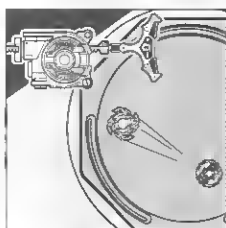

CUSTOMIZE FOR EACH BATTLE!

WHAT IS CUSTOMIZING?


Customizing is taking parts from different BEYBLADE tops and putting them together to create a new top. Why customize? Because you can change how your top will perform in battle. By switching parts, you can create a top that will perform a certain way. For example, if your opponent has an Attack Type top, you may want to change your top's parts to make it a Defense Type top, to help withstand your opponent's attacks.

Learn all the different types of Attack Rings, Weight Disks and Spin Gears that are available and that you have in your collection. Look at the star chart on the packages to see the strengths of each top's parts and check out the website beyblade.hasbro.com for more information!

TRIPLE SHOT You and your opponent each battle 3 BEYBLADE tops for triple the action!



Get your 3 BEYBLADE tops ready.

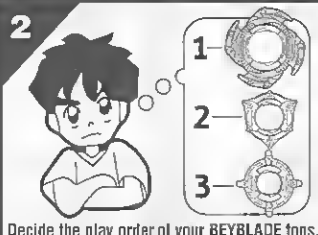


Decide the play order of your BEYBLADE tops.



To start the game, players launch their first BEYBLADE top.



Play three rounds.

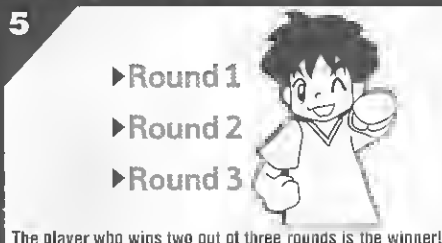

► Round 1
► Round 2
► Round 3

The player who wins two out of three rounds is the winner!



Check it out! For game ideas, strategies and official game rules, please see

www.beyblade.com
beyblade.hasbro.com



Product and colors may vary
®* and/or TM* & © 2004
© Aoki Takao/BB3Project
TM & © ABC Family World